

### ADJUSTING #40103 OR #40106 CONTROL ASSEMBLY

#### TURN OFF POWER SUPPLYING THE HAND DRYER AND REMOVE COVER

- Using your fingers or a small flat-blade screwdriver, adjustments can be made as follows. After adjustment is made, restore power and test for proper operation.

#### RANGE:

When a sensor is replaced in a dryer, sometimes the pre-set range is different than that of the older sensor causing the dryer to stay on or not operate consistently while drying hands. When this happens, the sensing range can be adjusted by turning the knob marked "R" counterclockwise to decrease sensor range, and clockwise to increase sensor range.

#### VARIABLE MOTOR SPEED:

The motor is preset at the factory for full speed. When sound is an issue, the speed of the motor can be adjusted by turning the knob marked "M" counterclockwise to reduce the speed. In addition using the larger 1.1" noise reduction nozzle will further reduce the sound.

#### VARIABLE HEAT:

The heat is preset at the factory for full heat. When there is a need to reduce this heat, turn the knob marked "H" counterclockwise to reduce heat to Medium, Low or Off. Note that the Xlerator Eco<sup>®</sup> does not have heat, but still has the knob marked "H", which is non-functional for this model.

